

- Software for the Web-server II, 1598
- Configuration tools for the function Web512 and Web128 respectively

Fire alarm systems Web-server II S/W Web512 / Web128

General

The hardware, Web-server II 1598 (see product leaflet MEW00929) is mounted outside and close to (≤ 3 m) an EBL512 c.i.e. or inside an EBL128 c.i.e.

Web-server II software

Depending on the downloaded software, the web-server II can be used for different functions. A configuration tool is used to create and download the configuration and the software for the function, e.g. **Web512** or **Web128**.

Web512 / Web 128 (software)

Web512 II Configuration tool.

Web128 II Configuration tool.

For presentation of the actual EBL512 (version ≥ 2.3) or EBL128 (version ≥ 1.0) status in a PC using the web browser Microsoft Internet Explorer, via Internet or an intranet (LAN). *User name* and *Password* can be used.

For EBL512, version ≥ 2.5 or EBL128 version ≥ 1.1 , also remote control with encrypted and safe two-way communication. Depending on the access level, fire alarms can be reset, faults acknowledged, alarm points can be disabled etc. *User names* and *Passwords* for five different *User (access) levels*.

E-mails

E-mails can be sent in case of fire alarm, pre-warning, test mode alarm, fault, disablement and/or service signal.

Gateway functions

One of the following gateway functions can be used:

EBL Talk, an open protocol, used to transmit and present EBL512 or EBL128 status information (fire alarms, faults, disablements etc.) in a separate PC application.

Tateco, a protocol used to transmit and present fire alarm information in an Ascom Tateco paging system.

SIA, a protocol used to transmit and present status information in a separate PC application. (EBL512 only.)

Configuration & S/W download


After the web page configuration (PC tool **Web512 II Config tool V2.x** or **Web128 II Config tool V1.0.4**), the web page and the web-server software are downloaded to the Web-server II via TCP/IP.

Type number	
1)	Web512 II Configuration tool for EBL512 version ≥ 2.3 .
1)	Web512 II Configuration tool for EBL512 version ≥ 2.5 . (Remote control possible.)
1)	Web128 II Configuration tool for EBL128 version ≥ 1.0 .
1)	Web128 II Configuration tool for EBL128 version ≥ 1.1 . (Remote control possible.)
1598	Web-server II, incl. cable & accessories kit (the RS232C and power supply cables for system EBL512 are 3 m and for system EBL128, 0.65 m.).

1) The configuration tools can be downloaded from our web page. Since the configuration tool is different depending on the system (EBL512 or EBL128) and also the EBL software version, there are different versions to be found on the web page. It is very important that the configuration tool has the same version as the EBL version, i.e. the two first digits (e.g. **2.5.x**).

<http://www.panasonic-fire-security.com>

NOTE! User name and Password are required for software download.

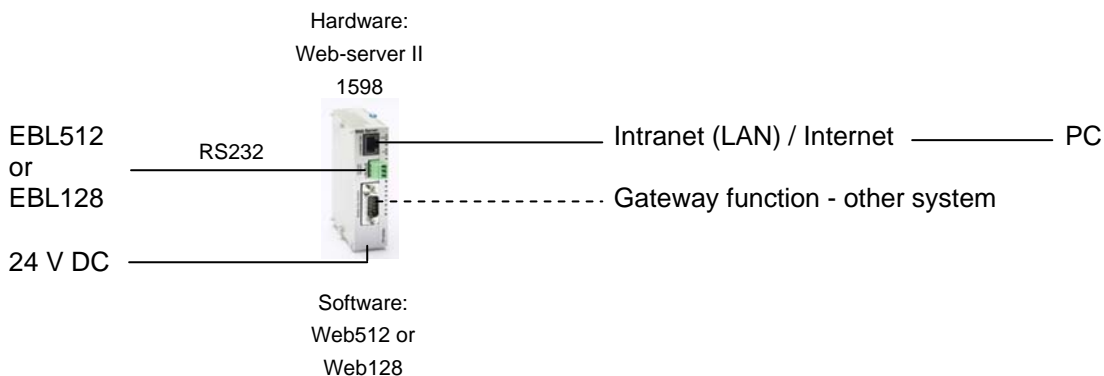

All technical features and data are subject to changes without notice, resulting from continuous development and improvement.

Product Leaflet	Date of issue	Revision / Date of revision
MEW01121	2008-09-23	